



## **BRP635 BLEEDING INSTRUCTIONS**

---

- **REMOVE THE PIPE PLUGS FROM THE PUMP AND THE RAM**
- **PUSH THE HYDAULIC FLUID THROUGH THE PUMP TO THE RAM (NOTE:  
ONLY USE A 1LT CONTAINER WITH A POINTED TIP TO PUSH THE  
HYDRAULIC CLUID THROUGH)**
- **MAKE SURE ALL THE AUR BUBBLES ARE REMOVED BEFORE PLUGGING THE  
RAM**
- **REMOVE ALL AIR FROM THE PUMO AND PUT THE PLUG BACK IN**

**ANY FURTHER QUESTIONS REGARDING THESE INSTRUCTION, PLEASE CONTACT  
BICKNELL RACING PRODUCTS DIRECTLY.**