


# BRP 4550B – MID RAIL REAR PANHARD BOLT KIT

- 4 – BRP 482 2" SPACERS
- 1 – BRP 719 1/2" STEEL SPACER
- 1 – BRP 720 3/4" STEEL SPACER
- 1 – 1/2" F X 2 1/4" BOLT
- 4 – 1/2" C X 3 1/2" BOLTS
- 2 – 1/2" C X 5 1/2" BOLTS
- 1 – 1/2" F X 1 1/4" FLAT HEAD BOLT
- 1 – 1/2" F NYLOCK NUT
- 4 – 1/2" C NARROW NYLOCK NUTS
- 1 – 1/2" LOCKWASHER
- 4 – 1/2" C NYLOCK NUTS
- 2 – 1/2" C X 1 1/4" BOLTS

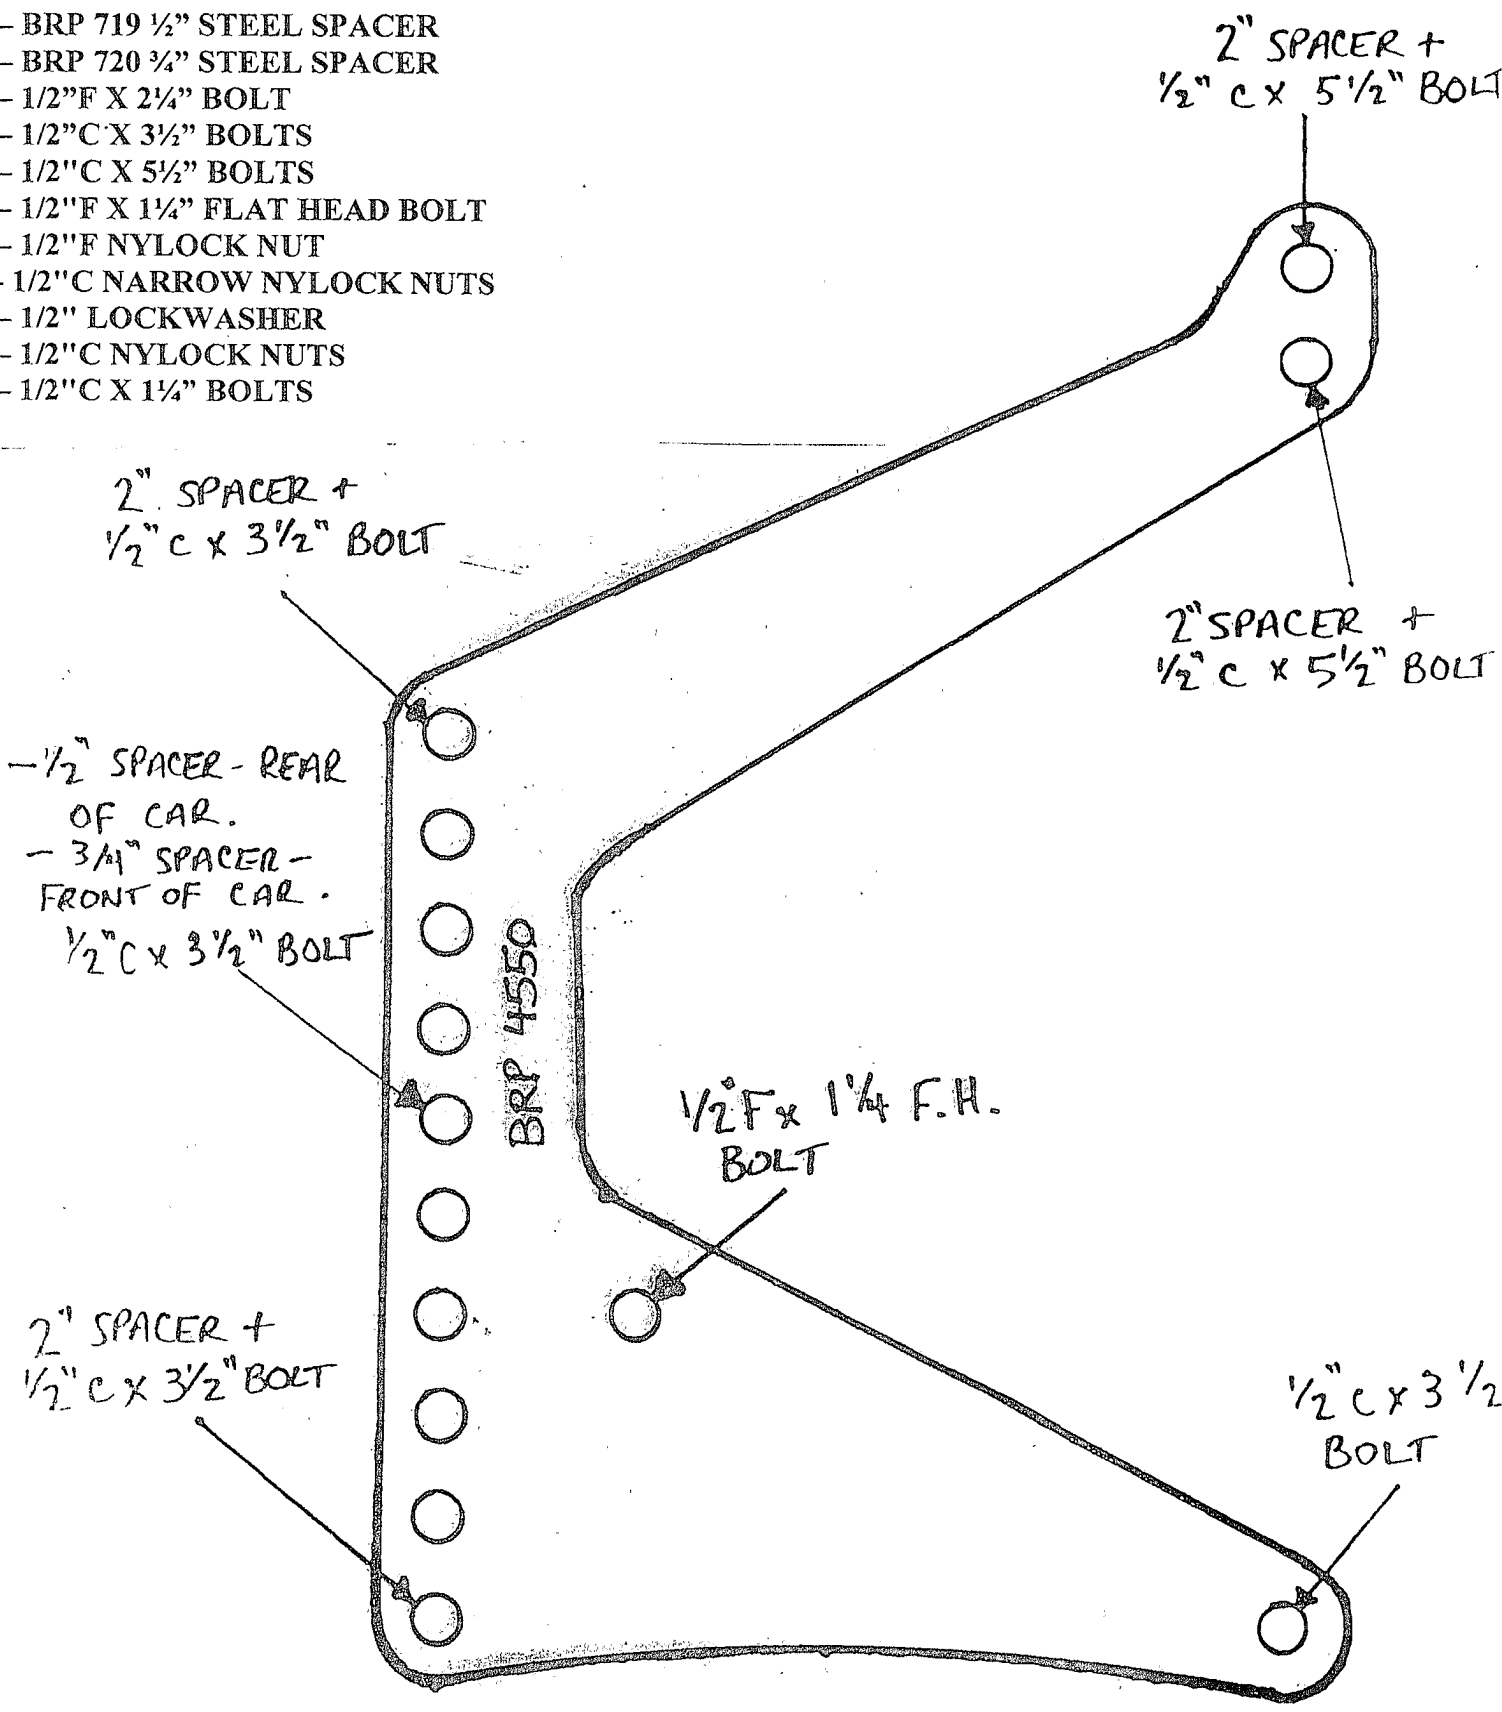

- 1/2" SPACER - REAR OF CAR.

- 3/4" SPACER - FRONT OF CAR.

1/2" C X 3 1/2" BOLT

2" SPACER + 1/2" C X 3 1/2" BOLT

BRP 4550

1/2" F X 1 1/4" F.H. BOLT

1/2" C X 3 1/2" BOLT

2" SPACER + 1/2" C X 5 1/2" BOLT

2" SPACER + 1/2" C X 5 1/2" BOLT